





PARTS AND HARDWARE

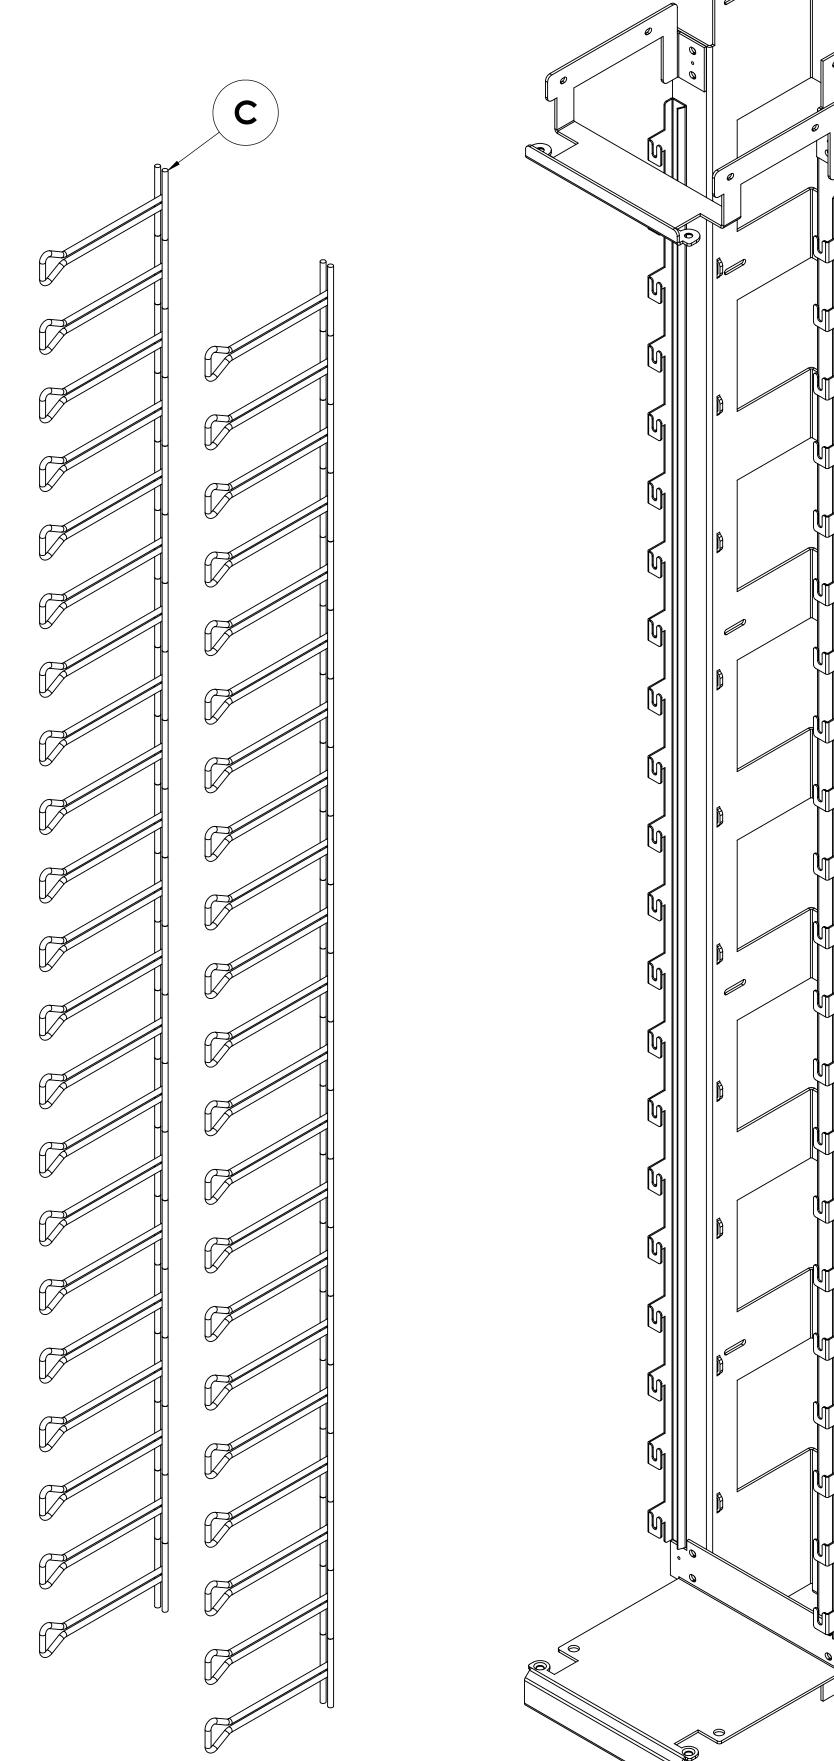


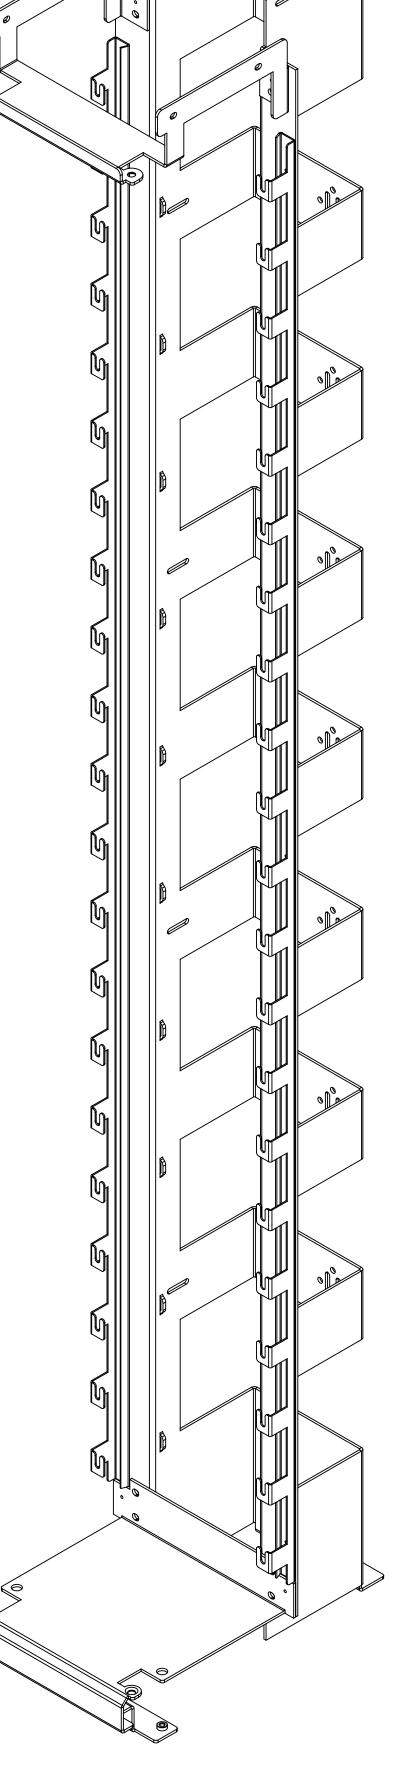


D

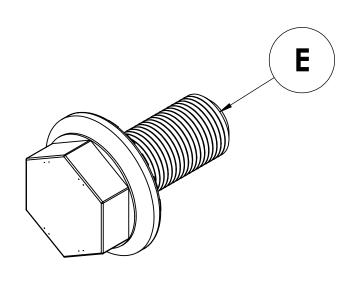


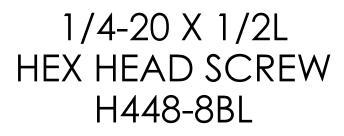


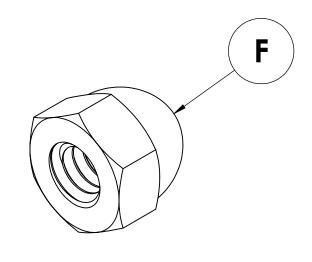





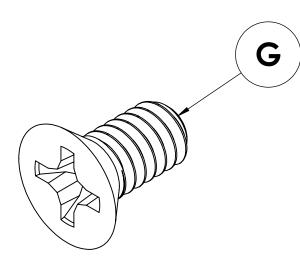


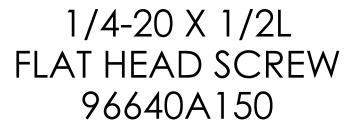


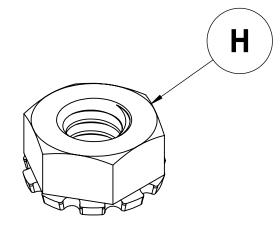

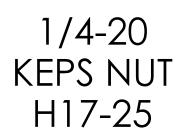


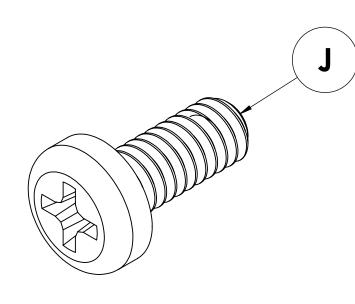

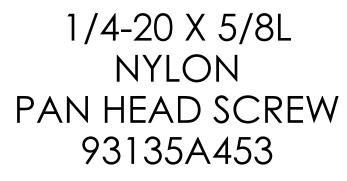

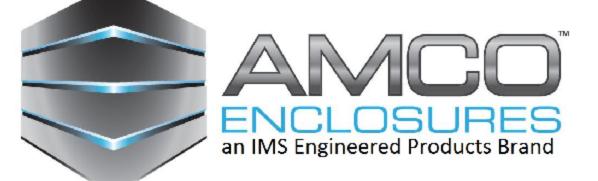


1 INNOVATION DRIVE - DES PLAINES, IL 60016 L:\Engineering\IMS Product Project\TCM\Work_Instructions\TCMFDINST-2.0

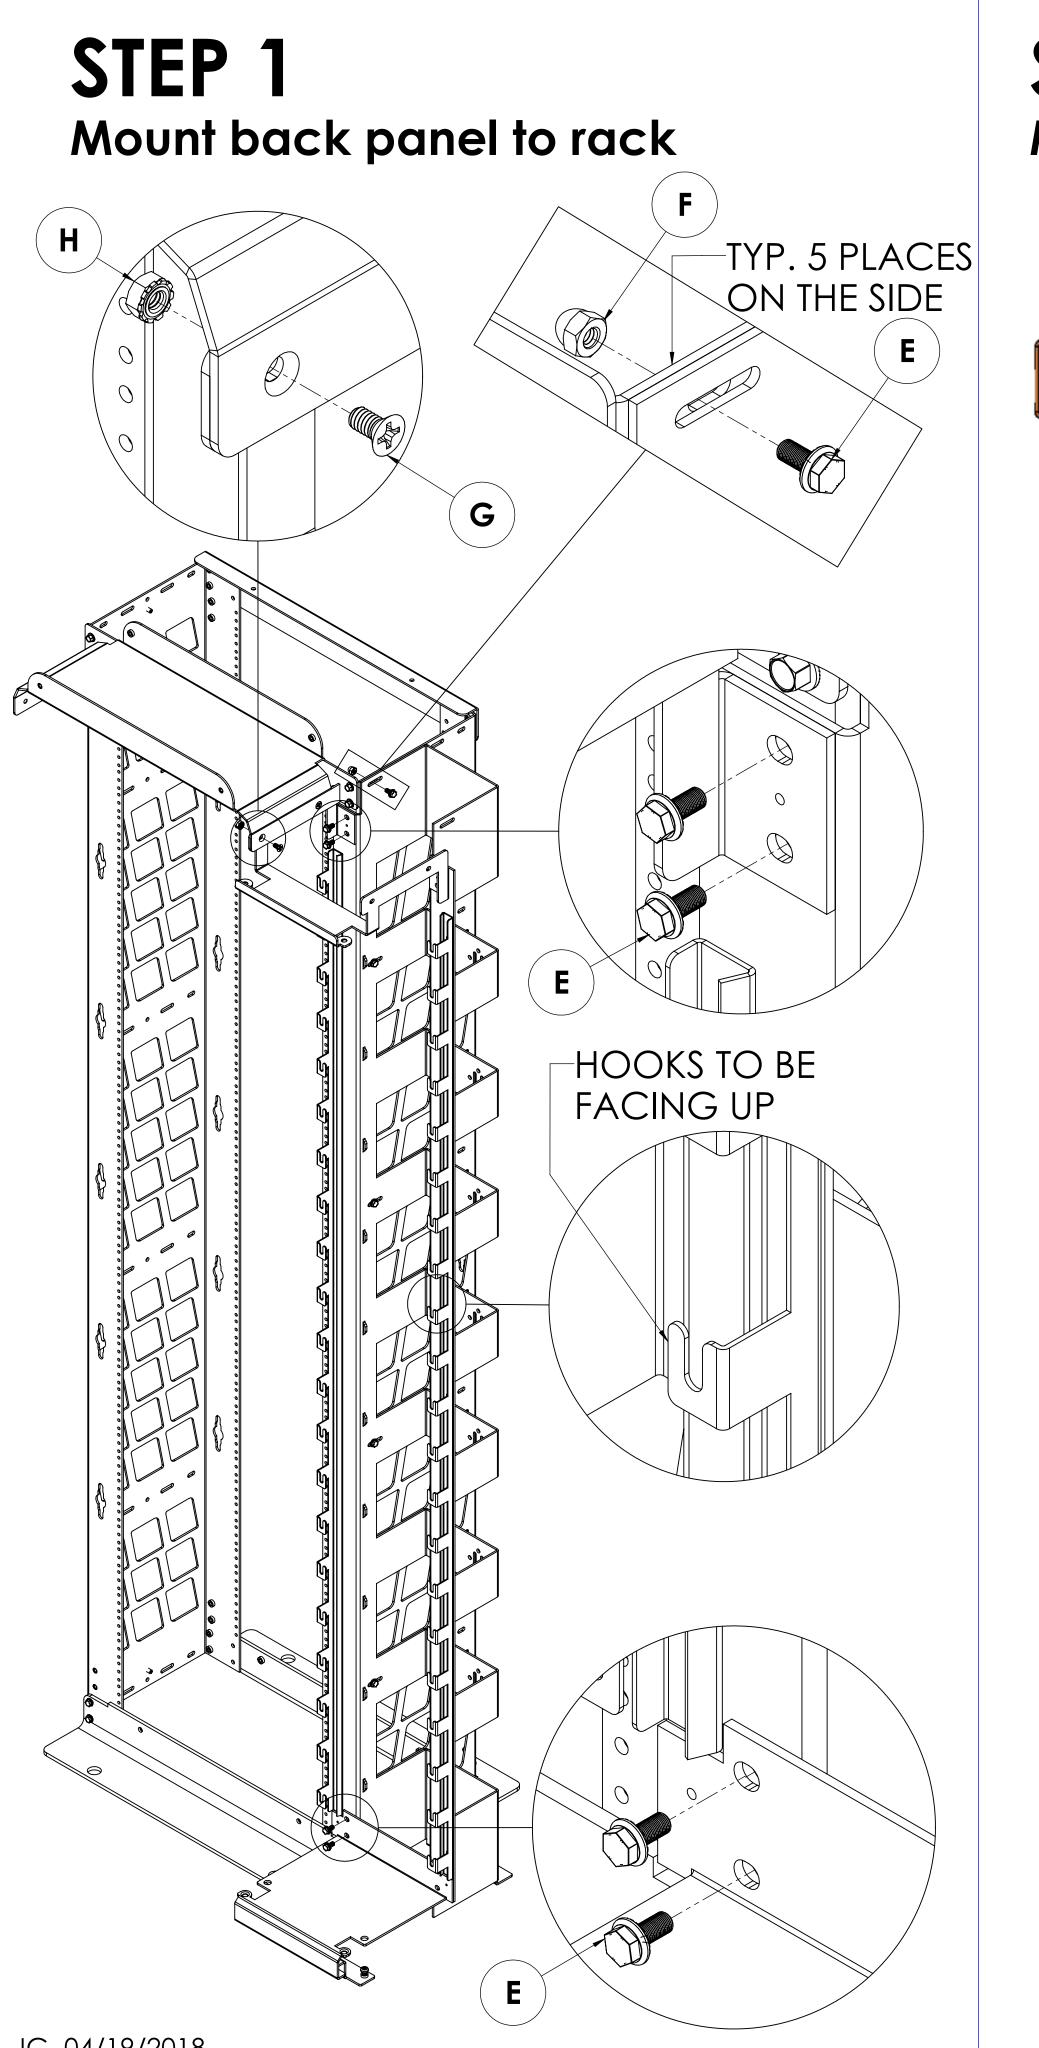

JG 04/19/2018





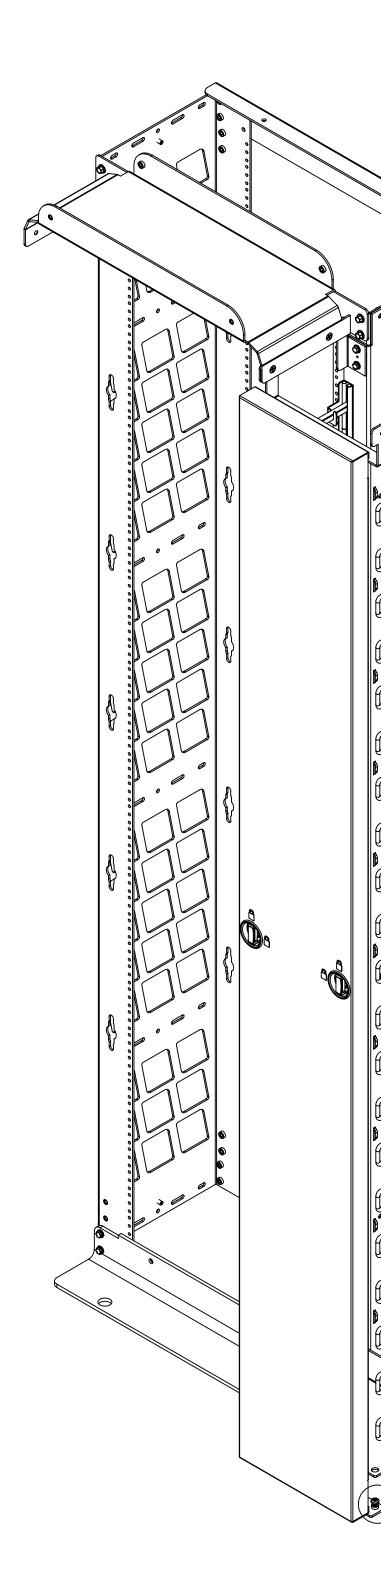


STEP 2: TURN STEP 1: INSERT WIRE FINGERS WIRE FINGERS SO THEY ARE IN AT AN ALIGNED ANGLE VERTICALLY ABOVE HOOKS STEP 2: ALIGN WIRE FINGERS STEP 3: DROP FINGERS DOWN WITH HOOKS IN INTO SLOTS BRACKET


Level cable manager and install door

FOR DOOR INSTALLATION:

- TURN LOCKS TO OPEN POSITION
- PLACE DOOR IN LOCATION
- TURN LOCKS TO CLOSED POSITION
- ALIGNING INTERNAL RODS WITH HOLES



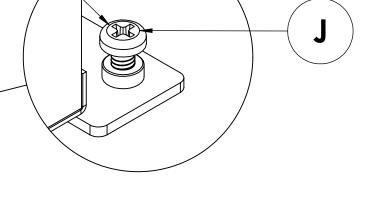

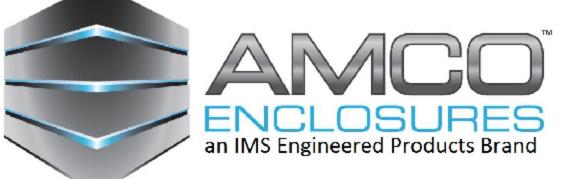

1 INNOVATION DRIVE - DES PLAINES, IL 60016 L:\Engineering\IMS Product Project\TCM\Work_Instructions\TCMFDINST-2.0